

On-Grid PV Inverter

Installation and Operation Manual

www.aforeenergy.com



Afore New Energy Technology (Shanghai) Co., Ltd.

T 86-21-54326236 F +86-21-54326136 E info@aforeenergy.com

Ad Building 7, No.333 Wanfang Rd, Minhang District, Shanghai, China. 201112



Afore New Energy Technology (Shanghai) Co., Ltd.

Contents

1. About This Manual	1
1.1 Scope of Validity	1
1.2 Target Group	1
1.3 System Diagram	1
2. Safety & Symbols	3
2.1 Safety Precautions	3
2.2 Explanations of Symbols	4
3. Installation	5
3.1 Pre-installation	5
3.1.1 Unpacking & Package List	5
3.1.2 Product Overview	6
3.1.3 Mounting Location	9
3.2 Mounting	10
4. Electrical Connection.	12
4.1 PV Connection	12
4.2 Grid Connection	15
4.3 Earth Connection	17
4.4 Communication Connection	18
4.5 Zero-injection Smart Meter (Optional)	19
5. Operation	21
5.1 Control Panel	21
5.2 Menu Structure	22
5.3 Setting	24
5.3.1 Startup	24
5.3.2 Voltage Range	24
5.3.3 Frequency Range	25
6. Commissioning	26
7. Start-up & Shut Down	26
7.2 Shut down	26
7.3 Restart	26
8. Maintenance&Trouble Shooting	27
8.1 Maintenance	27
8.2 Trouble Shooting	27
9. Specifications	33

1.About This Manual

1.1 Scope of Validity

This manual describes the installation, commissioning, operation and maintenance of the following on-grid PV inverters produced by Afore New Energy:

Low-voltage Three-Phase

BNT005KTL BNT006KTL BNT008KTL BNT010KTL BNT012KTL
BNT013KTL BNT015KTL

Please keep this manual available all the time in case of any emergency.


1.2 Target Group

This manual is for qualified personnel. The tasks described in this manual must only be performed by qualified personnel.


1.3 System Diagram

The typical on-grid PV system connection diagram.


BNT005KTL BNT006KTL

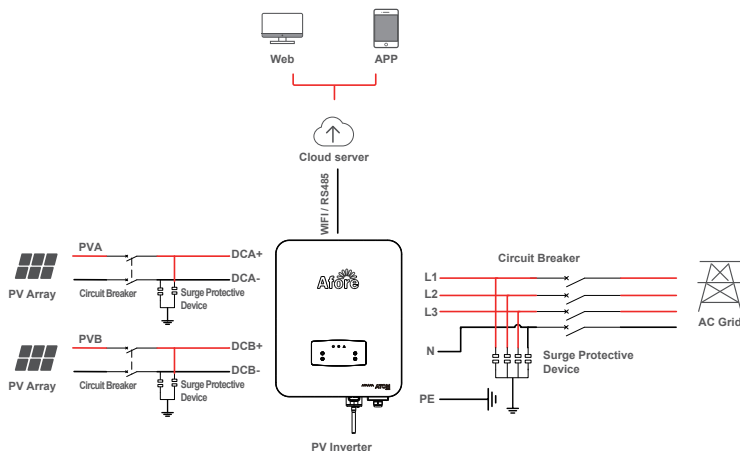

BNT008KTL

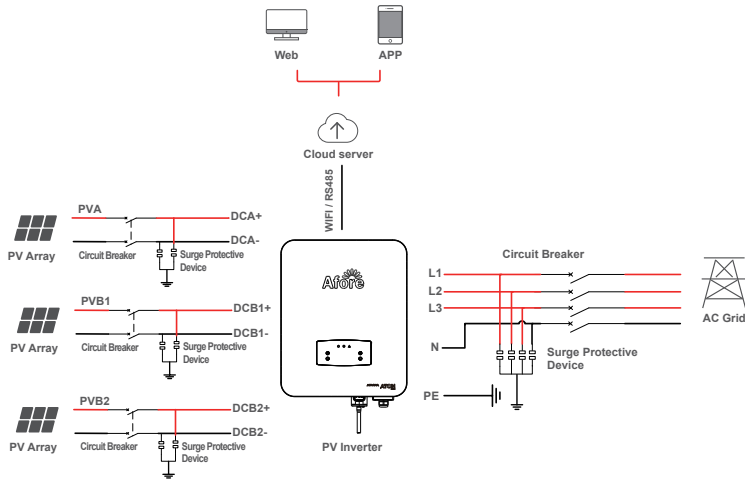

BNT010KTL BNT012KTL BNT013KTL BNT015KTL

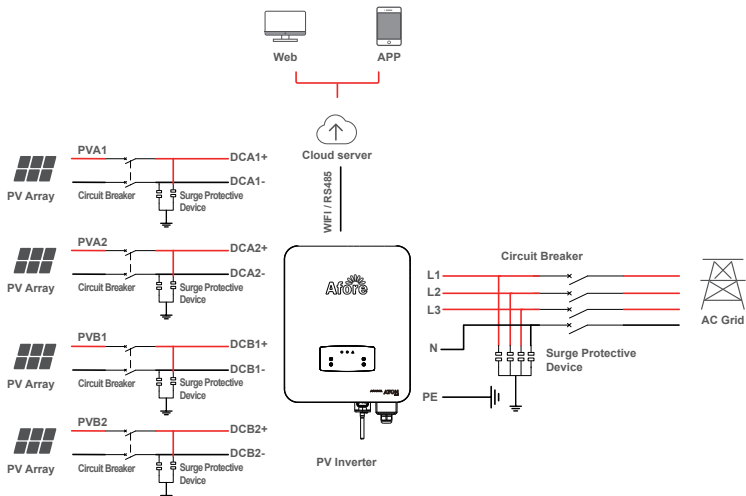

Circuit Breaker Recommendation

Type	Max AC Current (A)	Rated current of AC breaker (A)
BNT005KTL	14.4	32
BNT006KTL	17.3	63
BNT008KTL	23.1	63
BNT010KTL	28.9	63
BNT012KTL	34.6	63
BNT013KTL	36	63
BNT015KTL	40	63

Surge Protector Recommendation

- AC side, nominal discharge current 20KA, second grade lightning protection, protection voltage 2.5KV.
- DC side, nominal discharge current 20KA, second grade lightning protection, protection voltage 3.2KV.

Note:



The Inverter can be only connected to low-voltage grid.

2.Safety & Symbols

2.1 Safety Precautions

1. All work on the inverter must be carried out by qualified electricians.
2. The device may only be operated with PV panels.
3. The PV panels and inverter must be connected to the ground.
4. Do not touch the inverter cover until 5 minutes after disconnecting both DC and AC power supply.

5. Do not touch the inverter enclosure when operating, keep away from materials that may be affected by high temperatures.
6. Please ensure that the used device and any relevant accessories are disposed of in accordance with applicable regulations.
7. Afore inverter should be placed upwards and handled with care in delivery. Pay attention to waterproof. Do not expose the inverter directly to water, rain, snow or spray.
8. Alternative uses, modifications to the inverter not recommended. The warranty can become void if the inverter was tampered with or if the installation is not in accordance with the relevant installation instructions.

2.2 Explanations of Symbols

Afore inverter strictly comply with relevant safety standards. Please read and follow all the instructions and cautions during installation, operation and maintenance.



Danger of electric shock

The inverter contains fatal DC and AC power. All work on the inverter must be carried out by qualified personnel only.



Beware of hot surface

The inverter's housing may reach uncomfortably hot 60°C (140°F) under high power operation. Do not touch the inverter enclosure when operation.



Residual power discharge

Do not open the inverter cover until 5 minutes after disconnection both DC and AC power supply.



Important notes

Read all instructions carefully. Failure to follow these instructions, warnings and precautions may lead to device malfunction or damage.



Do not dispose of this device with the normal domestic waste.



Without transformer

This inverter does not use transformer for the isolation function.



CE mark

The inverter complies with the requirements of the applicable CE guidelines.



Refer to manual before service.

3. Installation

3.1 Pre-installation


3.1.1 Unpacking & Package List

Unpacking

On receiving the inverter, please check to make sure the packing and all components are not missing or damaged. Please contact your dealer directly for supports if there is any damage or missing components.

Package List

Open the package, please check the packing list shown as below.

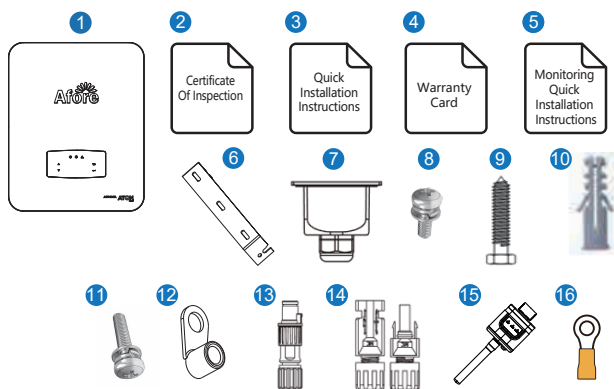


No.	Qty	Items	No.	Qty	Items
1	1	Solar Inverter	9	3	Mounting Bracket Screw
2	1	Certificate Of Inspection	10	3	Plastic Expansion Tube
3	1	Quick Installation Instructions	11	1	Security Screw
4	1	Warranty Card	12	4	AC Wiring Terminal
5	1	Monitoring Quick Installation Instructions	13	1	Zero-Injection Connector (Optional)
6	1	Wall Mounting Bracket	14	2/3/4	DC Connector sets
7	1	AC Waterproof Cover	15	1	Monitor Module
8	4	AC Wiring Cover Screw	16	1	Grounding Terminal

Note:





DC connectors Qty.: 5-6kW 2 pairs, 8kW 3 pairs, 10-15kW 4 pairs.

3.1.2 Product Overview

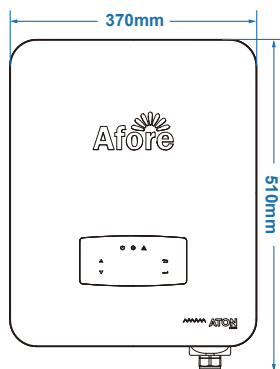


BNT005-008KTL

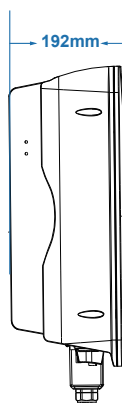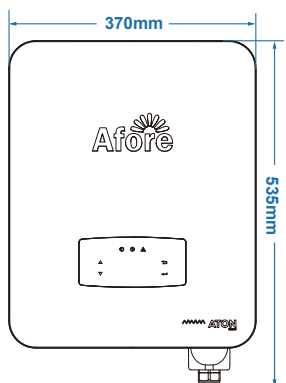


BNT010-015KTL

Inverter Terminals


BNT005-006KTL

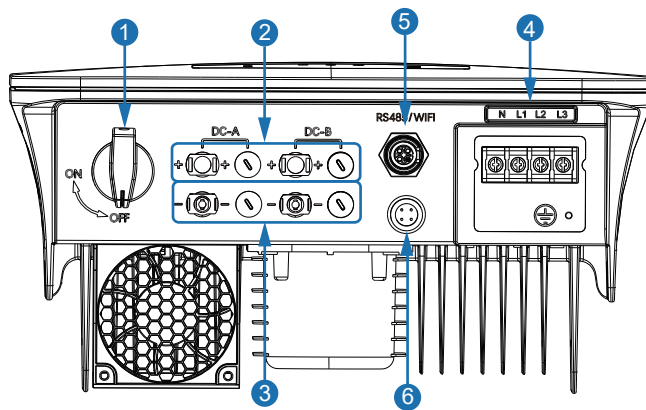

BNT008KTL

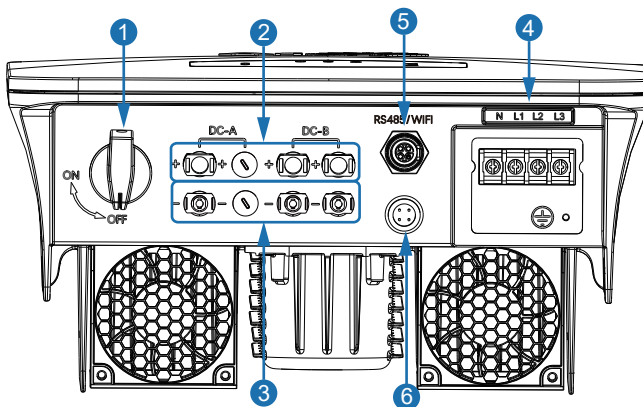

BNT010-015KTL

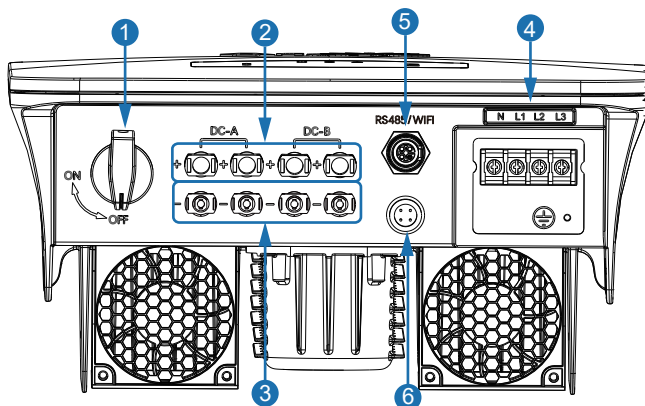


No.	Items
1	DC Switch
2	DC Connectors (+) For PV Strings
3	DC Connectors (-) For PV Strings
4	AC Connector
5	Zero-Injection Port (Optional)
6	Monitor Module Port


3.1.3 Mounting Location

The inverters are designed for indoor and outdoor installation (IP65), to increase the safety, performance and lifespan of the inverter, please select the mounting location carefully based on the following rules:


- The inverter should be installed on a solid surface, far from flammable or corrosion materials, where is suitable for inverter's weight and dimensions.
- The ambient temperature should be within $-25^{\circ}\text{C} \sim 60^{\circ}\text{C}$ (between -13°F and 140°F).
- The installation of inverter should be protected under shelter. Do not expose the inverter to direct sunlight, water, rain, snow, spray lightning, etc.

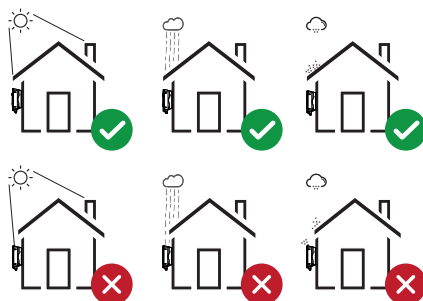

- The inverter should be installed vertically on the wall, or lean back on plane with a limited tilted angle. Please refer to below picture.


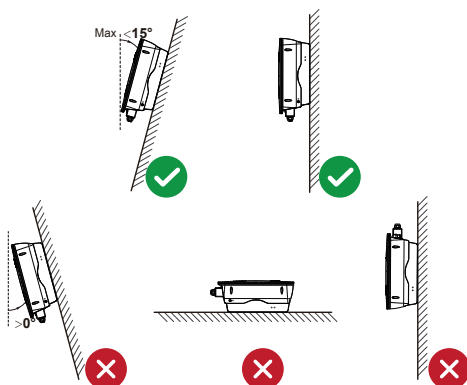


- Leave the enough space around inverter, easy for accessing to the inverter, connection points and maintenance.

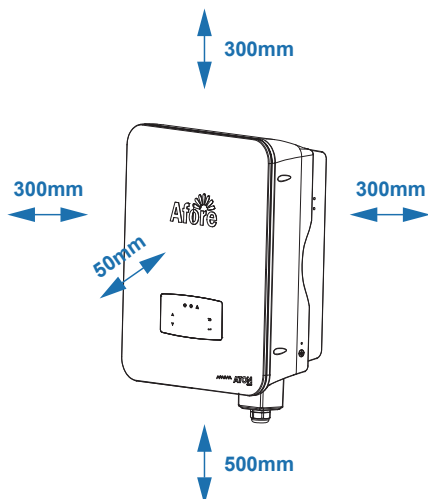


3.2 Mounting



Step 1

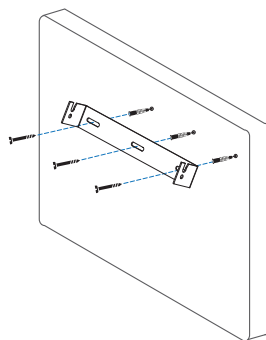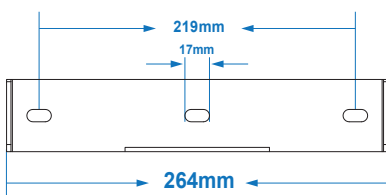

Step 2

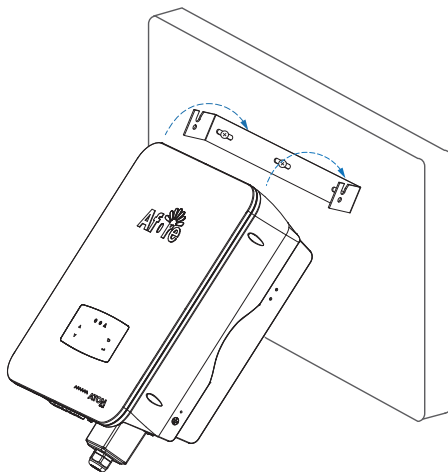

Step 3

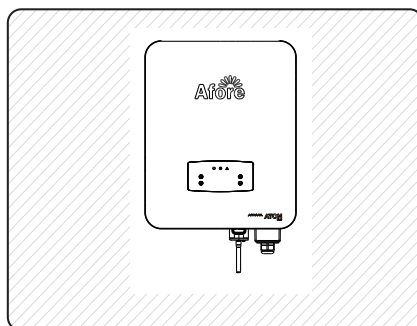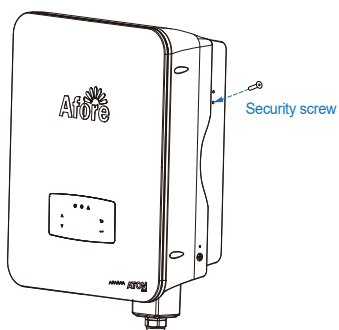

4. Electrical Connection

4.1 PV Connection

5-6kW three phase inverters have dual MPPT channels, each channel includes one PV string input;

8kW three phase inverters have dual MPPT channels, channel A includes 1 PV string input, and channel B includes 2 PV string inputs;

10-15kW three phase inverters have dual MPPT channels, each channel includes two PV string inputs;

For the best results, make sure that each MPPT channel is correctly connected with PV string. Otherwise, the inverter will activate voltage or current protection automatically.

Please make sure below requirements are followed:

- The open-circuit voltage and short-circuit current of PV string should not exceed the reasonable range of the inverters.
- The isolation resistance between PV string and ground must exceed 10 kΩ.
- The polarity of PV strings are correct.
- Use the DC plugs in the accessory.
- The lightning protector should be equipped between PV string and inverter.
- Disconnect all of the PV (DC) switch during wiring.




Warning:

The fatal high voltage may on the DC side, please comply with electric safety when connecting.

Please make sure the correct polarity of the cable connected with inverter, otherwise inverter could be damaged.


Step 1

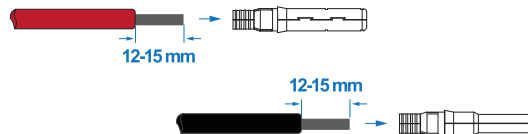

Note:

PV cable suggestion
Cross-section
4mm²


Step 2

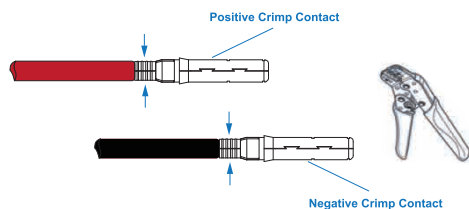

Note:


Please use PV connector crimper to pinch the point of the arrow.


Step 3

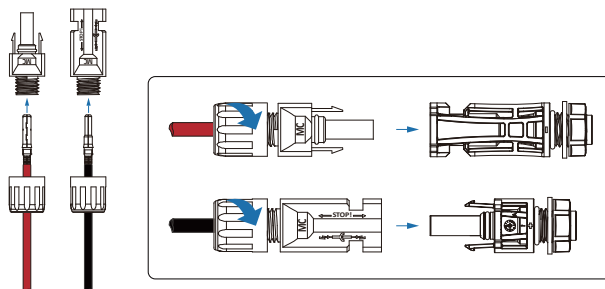

Note:


You'll hear click sound when the connector assembly is correct.

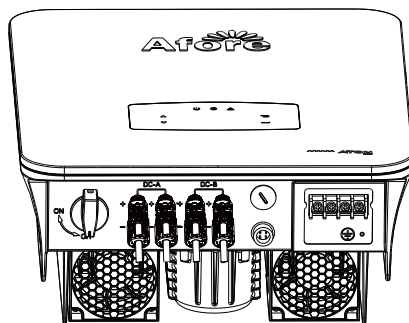

Note:
 PV string suggestion:


Option 1

Please ensure that each two strings of solar panels connected to inverter's each MPPT channel, the model and quantity of the solar panels of each string should be the same.

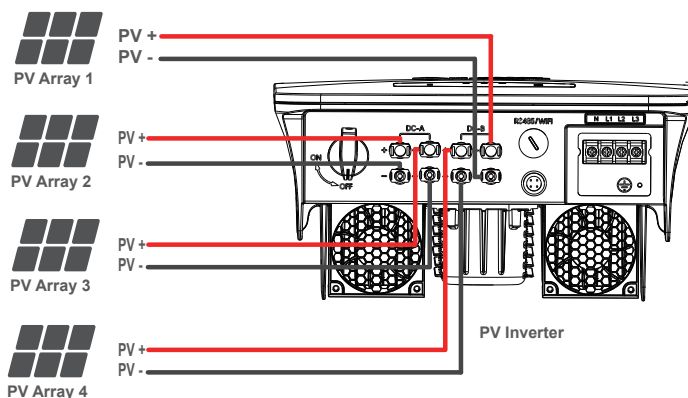

Option 2

In the high-power PV panel system, can connect each MPPT channel with one PV string, please make sure each PV string's voltage and current are within the recommended range of the inverter.

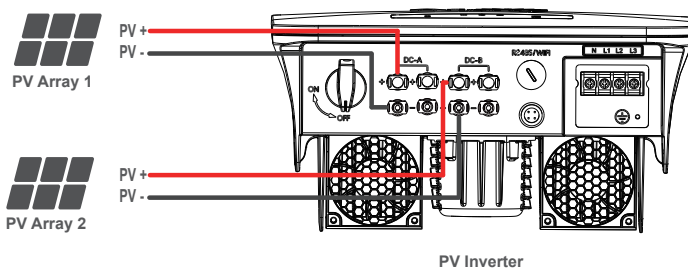

4.2 Grid Connection

The external AC switch should be installed between inverter and grid to isolate from grid. Please make sure below requirements are followed before connecting AC cable to the inverter.

- The AC (grid) voltage should not exceed the reasonable range of the inverters.
- The phase-line from AC distribution box are correctly connected.
- Use the AC plugs in the accessory.
- The surge protector should be equipped between grid and inverter.
- Disconnect the AC (grid) switch during wiring.



Warning:

The fatal high voltage may on the AC side, please comply with electric safety when connecting.
Please make sure the right line of AC grid connected with inverter, otherwise inverter could be damaged.

Step 1


Cable suggestion:

5-6kW Cross-section (Copper) 4-6mm² / 10AWG

8kW Cross-section (Copper) 6-10mm² / 8AWG

10-15kW Cross-section (Copper) 10-16mm² / 6AWG


After the terminals are crimped, wrap the joint position with insulation tape.

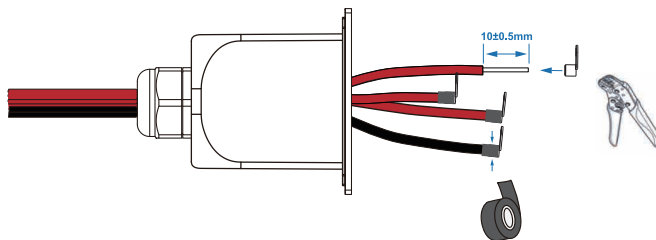

Note:

The wiring terminals should be wrapped with insulation tape, otherwise it will cause a short circuit and damage the inverter.

Step 2

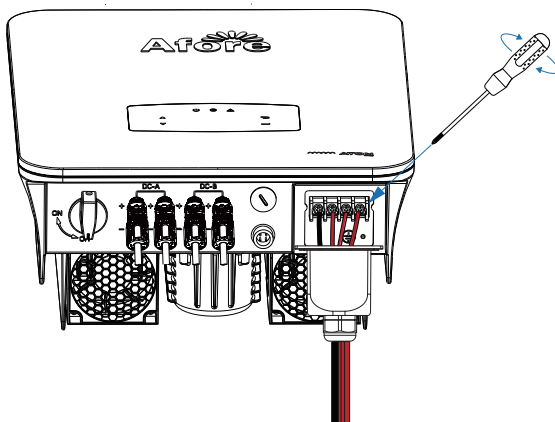


N = Neutral line

L1, L2, L3 = Live line

Unscrew the row of screws, insert the wire harness into the N, L1, L2, L3 caps one by one, and tighten the screws.

Step 3

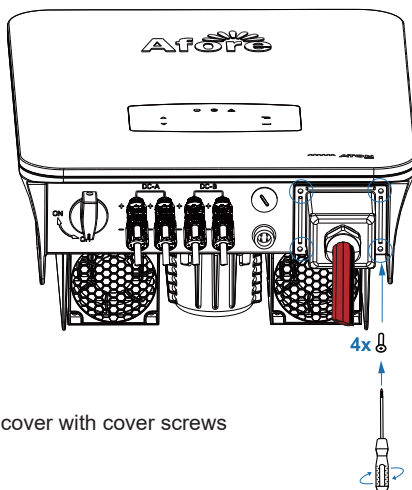

Fix the AC wiring cover with cover screws


4.3 Earth Connection



Note:

The user must connect a protective earth (PE) terminal to prevent electric shock. And make sure this PE terminal is properly grounded.


Step 1

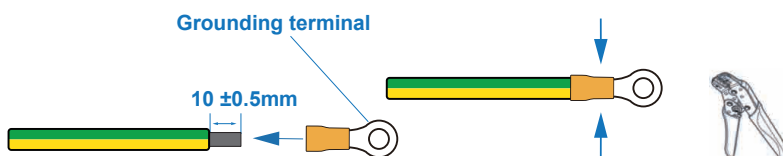

Note:

Earth cable PE suggestion:
Cross-section (Copper) $4\text{-}6\text{mm}^2$ / 10AWG

Step 2

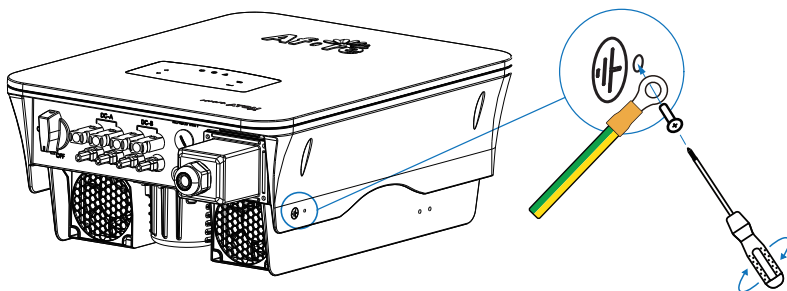

Grounding terminal is connected to the inverter at left or right side.


4.4 Communication Connection

The monitoring module could transmit the data to the cloud server, and display the data on the PC, tablet and smart-phone.


Install the WIFI / Ethernet / GPRS / RS485 Communication

WIFI / Ethernet / GPRS / RS485 communication is applicable to the inverter. Please refer to "Communication Configuration Instruction" for detailed instruction.

Step 1

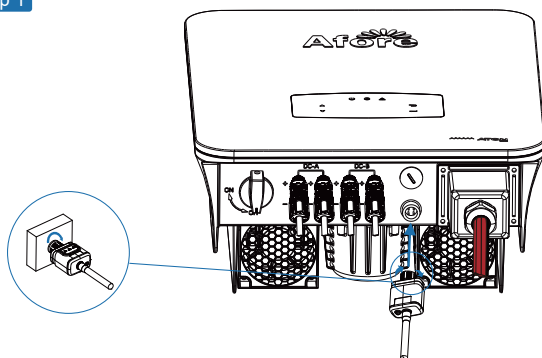

Step 2

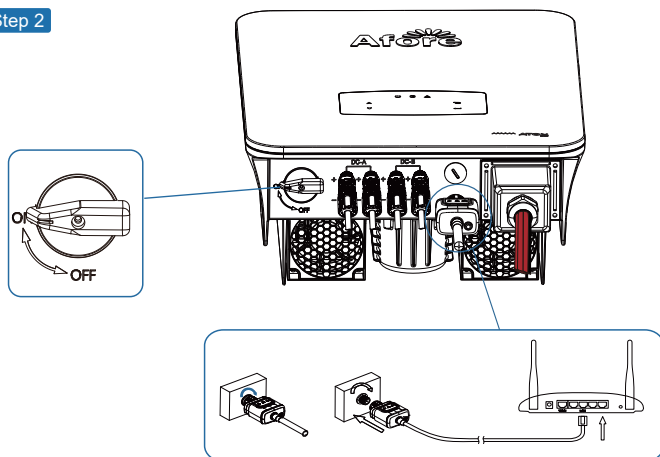


Turn on the DC switch and AC circuit breaker, and wait until the LED indicator on the monitoring module flashes, indicating that the monitoring module is successfully connected.

4.5 Zero-injection Smart Meter (Optional)

Smart meter is an intelligent control equipment which is used for on-grid inverters. Its main function is to measure the forward and reverse power on the grid-connected side, and transmit data to the inverter through RS485 communication to ensure that the power of the inverter is less than or equal to the user's home load, and no current flows into the grid.


Step 1

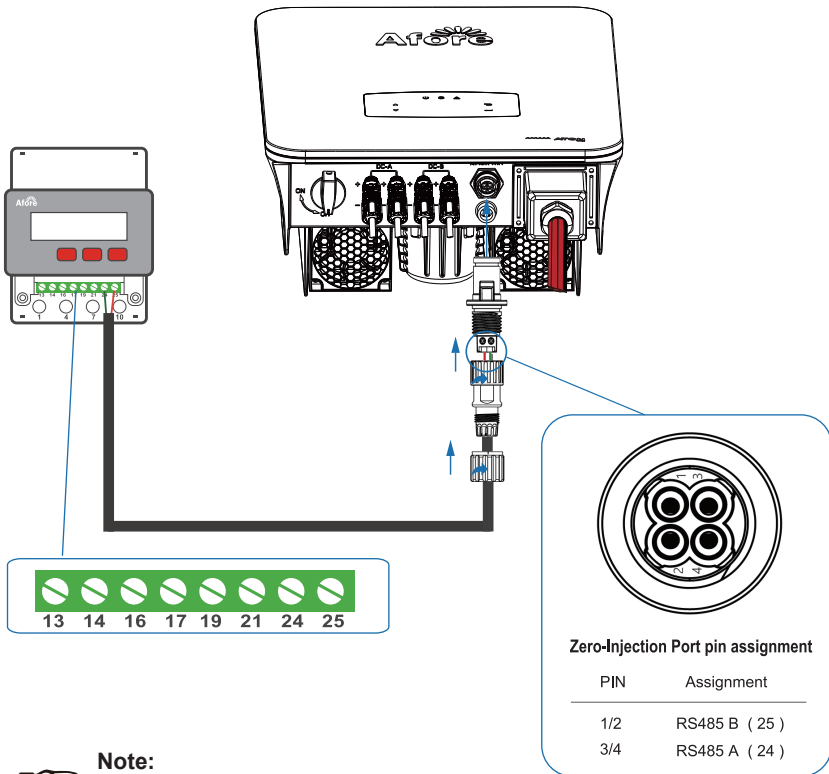

Note:

please follow below pin order
 RS485B (Pin 1/2) to three-phase meter (Pin 25)
 RS485A (Pin 3/4) to three-phase meter (Pin 24)


Step 2

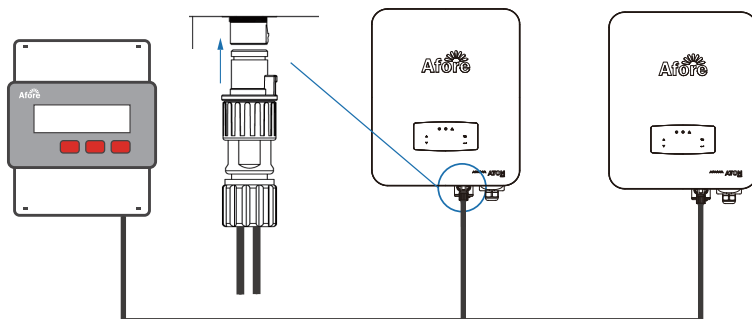

Note:



When multiple inverters are connected in parallel, the total output power could not exceed the reasonable range of the smart meter.

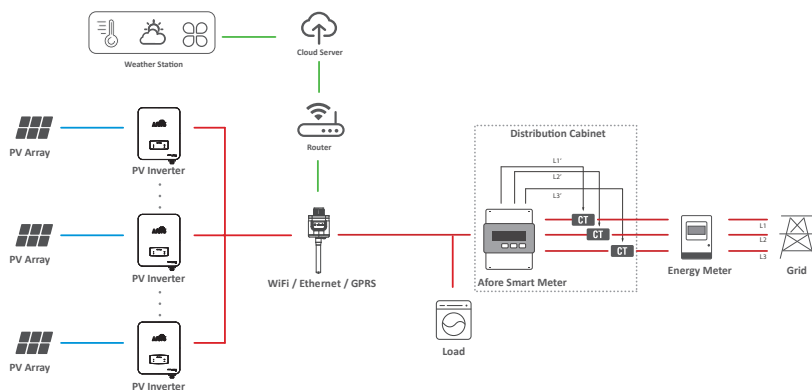


Note:



The Inverter could be connected in parallel with Smart Meter, make sure the total load power not exceed Smart Meter's limitation.

5.Operation


5.1 Control Panel

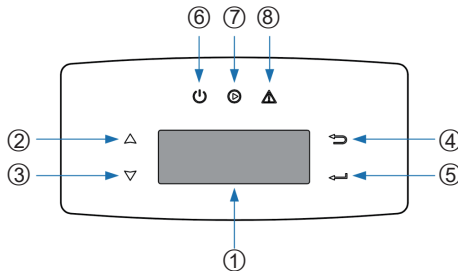


No.	Items	No.	Items
1	LCD Display	5	ENT Touch Button
2	UP Touch Button	6	POWER LED Indicator
3	DOWN Touch Button	7	GRID LED Indicator
4	ESC Touch Button	8	FAULT LED Indicator

Sign	Power	Color	Explanation
POWER	ON	Green	The inverter is stand-by
	OFF		The inverter is power off
GRID	ON	Green	The inverter is feeding power
	OFF		The inverter is not feeding power
FAULT	ON	Red	Fault occurred
	OFF		No fault

5.2 Menu Structure

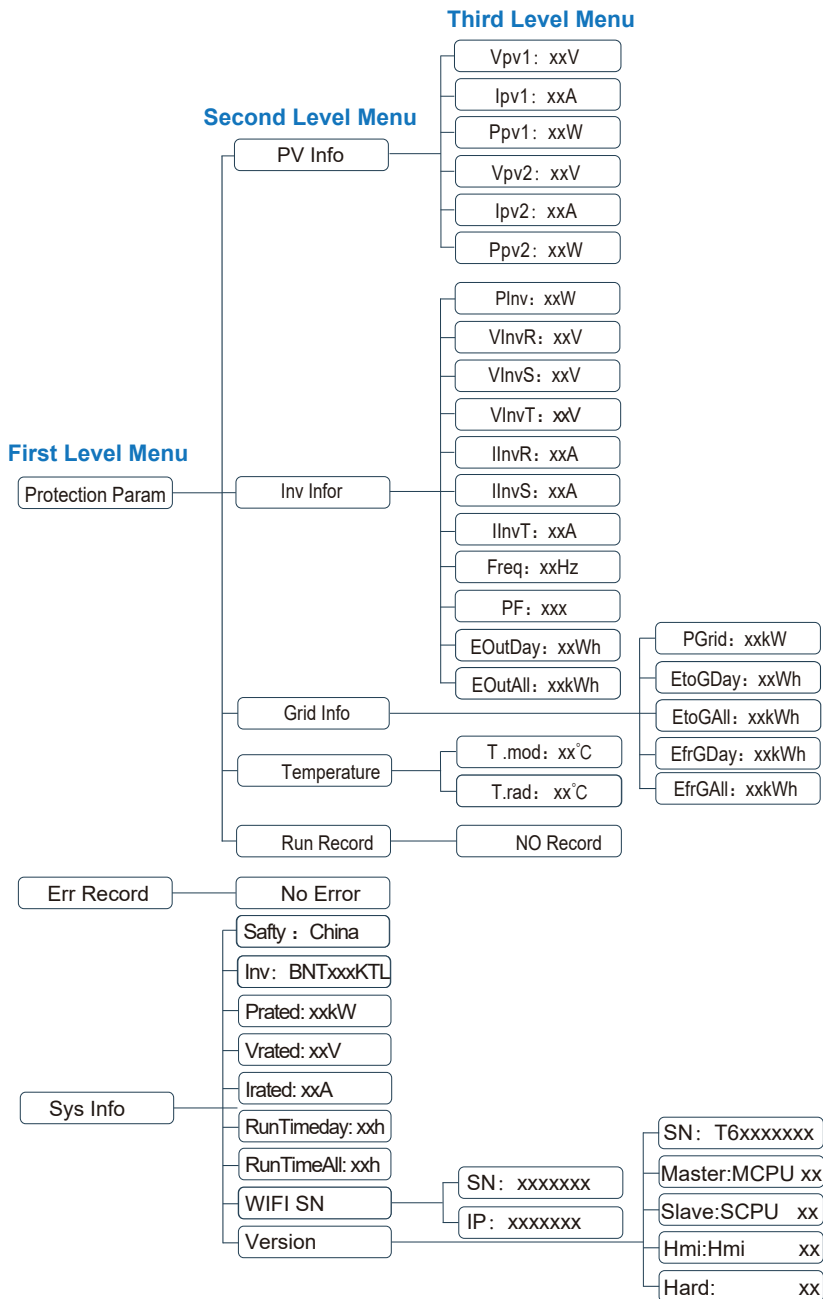

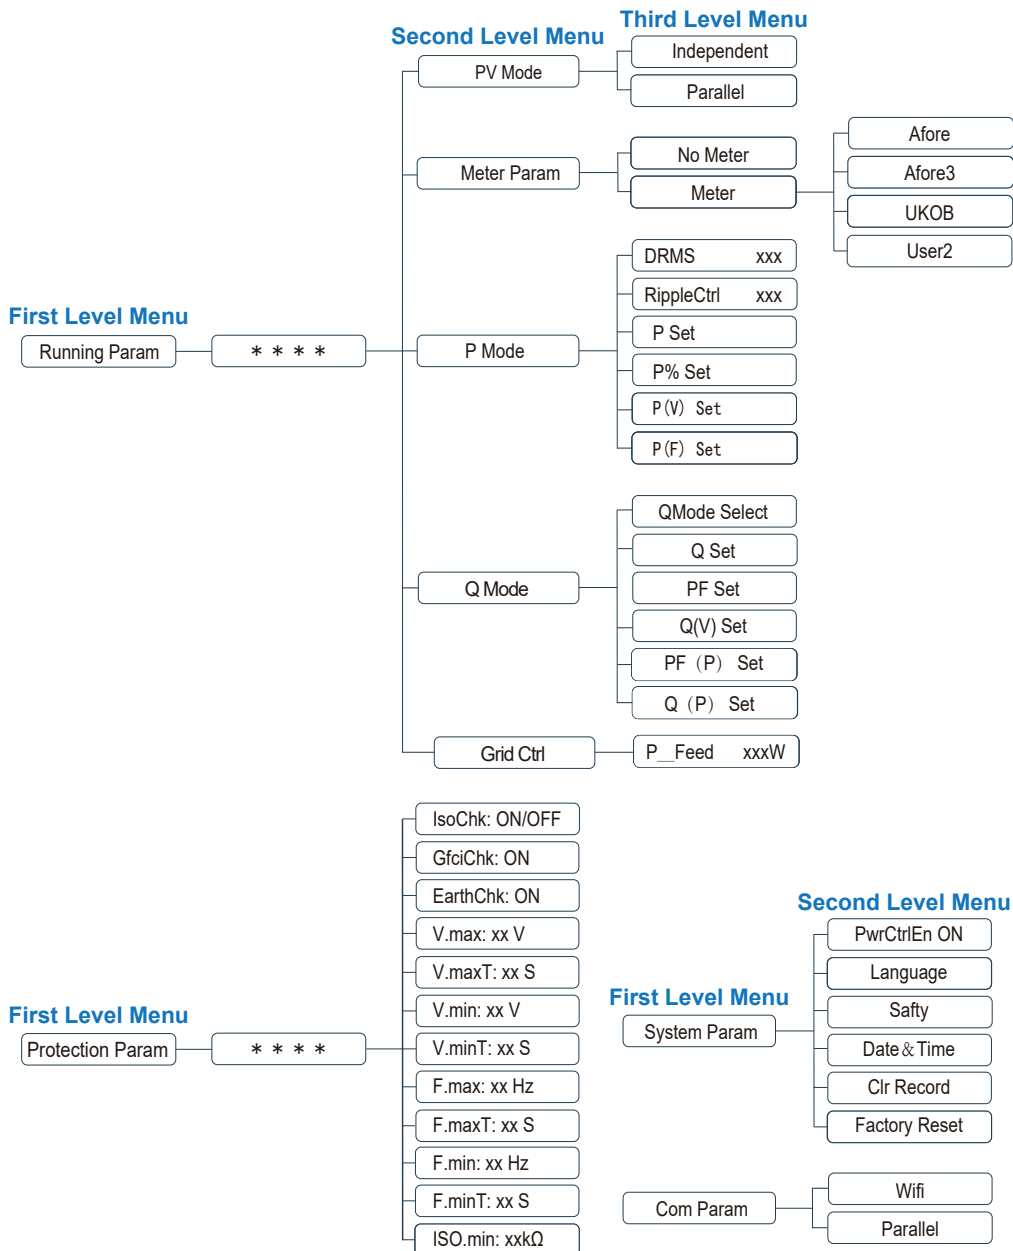


Explanation of LCD Display Content


Nouns	Explanation
Sys Info	Check the inverter's real-time operating information
Error Record	Check the inverter's fault records with date and time
System Param	Set the inverter's safty code / lanuage / time & date, restore to factory settings
Version	Check the inverter's SN and firmware version
Protection Param	Set the inverter's protection parameters
Running Param	Set the inverter's operating mode like paretel, active / reactive power control


5.3 Setting

5.3.1 Startup

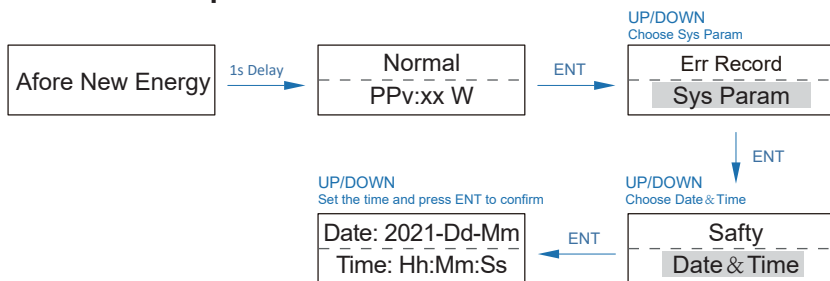


5.3.2 Voltage Range



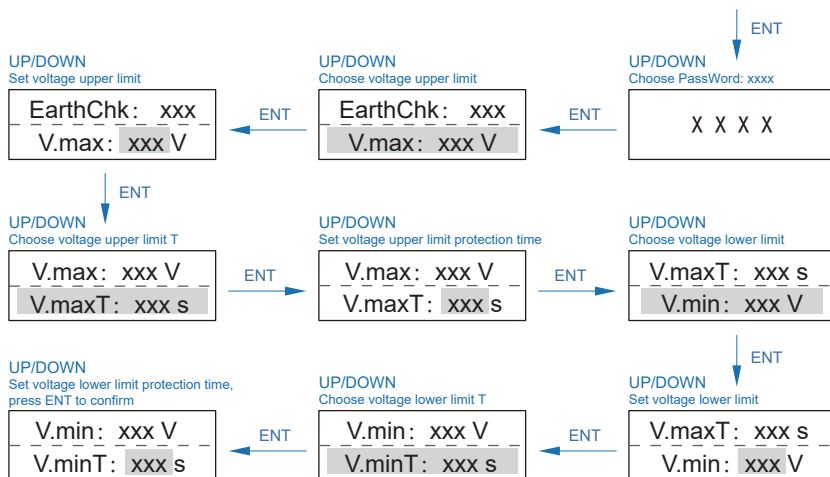

5.3.3 Frequency Range

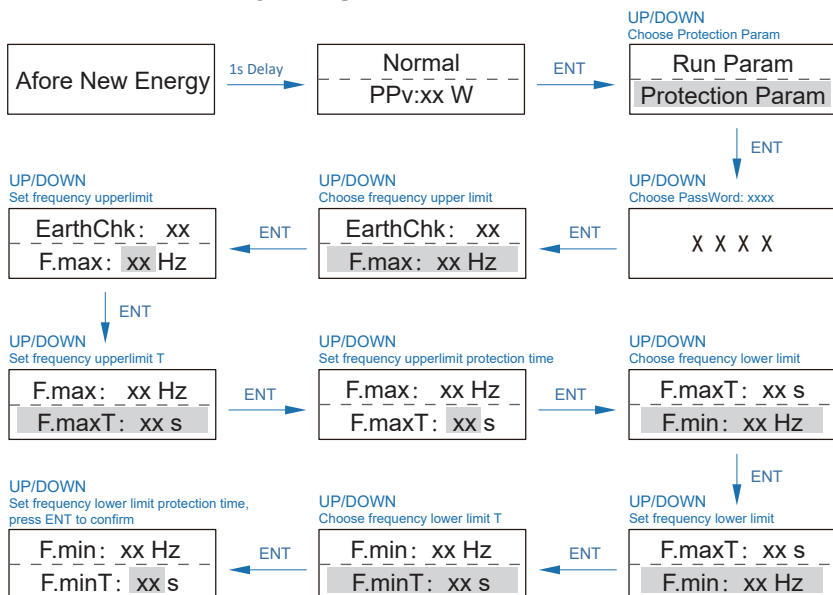

Note:

The parameters setting only works after the inverter is restarted.

6. Commissioning

Before starting up commissioning at site, please make sure below procedures and requirements are fully meet.

- Mounting location is meet the requirements.
- All of the electrical wiring is firmly connected, including PV wiring, Grid wiring and Earth wiring.
- The inverter setting has been finished accordingly to local standards or regulations.

Commissioning Procedures

- Turn on the AC switch between inverter output and the public grid;
- Turn on the DC switch on the inverter;
- Turn on the PV switch of the system.

7. Start-up & Shut Down

7.1 Shut down

- Turn off the DC switch on the inverter.
- Turn off the DC switch between PV panels and the inverter (if any).
- Close the AC switch between the inverter and the public grid.



Note:

The inverter will be operable after minimum 5 minutes.

7.2 Restart

- Shut down the inverter according to Chapter 7.1.
- Start-up the inverter according to Chapter 6.

8.Maintenance&Trouble Shooting

8.1 Maintenance

Periodically maintenance are necessary, please follow steps as below.

PV connection: twice a year

AC connection : twice a year

Earth connection: twice a year

Heat sink: clean with dry towel once a year.

8.2 Trouble Shooting

Fault messages will be displayed when fault occurs, please according to trouble- shooting table find related solutions.

Trouble-Shooting List

Type of Fault	Code	Name	Description	Recommend Solution
PV Fault	A01	PvConnectFault	The actual PV connection type (independent, parallel) different from setup.	<ul style="list-style-type: none"> Set PV connection type according to the actual PV connection type.
	A02	IsoFault	ISO check among PV panels/ the wires to the ground is abnormal.	<ul style="list-style-type: none"> Check whether the PV modules and its wiring are immersed in water and whether the insulation is damaged, and then make corrections. If the fault occurs continuously and frequently, contact the local distributors for help.
	A03	PvAfcIFault	PV current arcing	<ul style="list-style-type: none"> Check whether the PV cables and wiring terminals are broken or connection abnormal, and correct them. If the fault occurs continuously and frequently, contact the local distributors for help.
	A04	Pvs1OverVoltFault	PV Voltage over, beyond the reasonable range.	<ul style="list-style-type: none"> Reconfiguration of PV strings, reduce the PV number of a PV string to reducing inverter PV input voltage. Contact local distributors for suggestion.
	A05	PVs2OverVoltFault		
	A16	PVs1ReverseFault	PV(+) and PV(-) reversed Connection	<ul style="list-style-type: none"> Check whether PV(+) and PV(-) connection reversed or not. If reversed, make correction.
	A17	PVs1ReverseFault		
	A33	Pv1AbnormalFault	Compared with previous voltage and other PV voltages, this PV voltage suddenly becomes higher or lower.	<ul style="list-style-type: none"> Check if PV modules are partially blocked or cells are damaged. Check if PV cables and terminals broken or loose connection, then repair it.
	A34	Pv2AbnormalFault		
DC Fault	E01	Pv1HwOverCurrFault	PV current over, triggered the hardware protection circuit	<ul style="list-style-type: none"> Power off, then restart If fault still occurs continuously and frequently, please ask help for local distributors.
	E02	Pvs2HwOverCurrFault		
	E13	PVs1SwOverCurrFault	PV current over, triggered the software protection circuit	<ul style="list-style-type: none"> Power off, then restart If fault still occurs continuously and frequently, please ask help for local distributors.
	E14	PVs2SwOverCurrFault		

Type of Fault	Code	Name	Description	Recommend Solution
DC Fault	E33	Boost1SelfCheckFault	PV boost circuit abnormal when self checking	<ul style="list-style-type: none"> • Power off, then restart. • If fault still occurs continuously and frequently, please ask help for local distributors.
	E34	Boost2SelfCheckFault		
	E45	BusHwOverVoltFault	Bus voltage over	<ul style="list-style-type: none"> • Power off, then restart. • If fault still occurs continuously and frequently, please ask help for local distributors.
	E46	BusHwOverHalfVoltFault		
	E47	BusSwOverVoltFault		
	E48	BusSwOverHalfVoltFault		
	E49	BusSwUnderVoltFault	Bus voltage under as running	
	E50	BusUnbalancedFault	DC Bus voltage unbalanced	
AC Fault	F01	HwOverFault	Hardware detected that current over / BUS voltage over	<ul style="list-style-type: none"> • Power off, then restart. • If fault still occurs continuously and frequently, please ask help for local distributors.
	F02	InvHwOverCurrFault	Hardware detected that inverter current over	
	F03	InvROverCurrFault	R phase /Split phase L1 current over	
	F04	InvSOverCurrFault	S phase /Split phase L2 current over	
	F05	InvTOverCurrFault	T phase current over	
	F06	GridUnbalanCurrFault	3 phase current effective value has big difference	
	F07	DclnjOverCurrFault	DC injection current over	
	F08	AcOverLeakCurrFault	Ac side leakage current over	<ul style="list-style-type: none"> • Check if PV panels has good ground insulation and ground wires are connected well ground is well, then repair it. • Power off, then restart. • If fault still occurs continuously and frequently, please ask help for local distributors.
	F09	PLLFault	The phase-locked loop is operating abnormally, and it does not stably track the grid voltage phase.	<ul style="list-style-type: none"> • Power off, then restart. • If fault still occurs continuously and frequently, please ask help for local distributors.
	F10	GridRelay1Fault	It is detected that the relay group 1 cannot be opened or closed normally.	

Type of Fault	Code	Name	Description	Recommend Solution
System Fault	G01	PVs1ReverseFault	PV current sampling hardware abnormal	<ul style="list-style-type: none">• Power off, then restart.• If fault still occurs continuously and frequently, please ask help for local distributors.
	G02	PVs2CurAdChanFault		
	G16	RInvCurAdChanFault		
	G17	SInvCurAdChanFault		
	G18	TInvCurAdChanFault		
	G19	RInvDciAdChanFault		
	G20	SInvDciAdChanFault		
	G21	TInvDciAdChanFault		
	G22	LeakCurAdChanFault		
	G23	VoltRef(1.65V)AdChanFault		
	G30	UpsRDcvAdChanFault		
	G31	UpsSDcvAdChanFault		
	G32	UpsTDcvAdChanFault		
	G37	TempAdChanFault	All temperature sensors abnormal	<ul style="list-style-type: none">• Power off, then restart.• If fault still occurs continuously and frequently, please ask help for local distributors.
	G38	VoltAdConflictFault	The sample value of PV, battery and BUS voltage inconsistent with the actual value	
	G39	CPUAdConflictFault	The sample value between master CPU and slaver CPU inconsistent	
	G40	PowerCalcConflictFault	The sum of the PV power, battery and inverter output is too different from zero.	
	G41	EnvirOverTemp1Fault	Installation environment temperature over or low	<ul style="list-style-type: none">• Improve or change the installation environment to adjust the inverter installation environment temperature to normal range.• Power off, then restart.• If fault still occurs continuously and frequently, please ask help for local distributors.
	G42	EnvirLowTemp1Fault		
	G43	CoolingOverTemp2Fault	Cooling temperature over or low	
	G44	CoolingLowTemp2Fault		
	G45	OverTemp3Fault	Temperature3 over or low	
	G46	LowTemp3Fault		
	G46	DSPOverTempFault	CPU temperature over	

Type of Fault	Code	Name	Description	Recommend Solution
System Fault	G48	ModelConflictFault	Version conflict with inverter	<ul style="list-style-type: none"> Power off, then restart. If fault still occurs continuously and frequently, please contact local distributors for software upgrade, version setting details.
Inner Warning	I01	InterFan1Warning	Fan abnormal	<ul style="list-style-type: none"> Check if there is objects which blocking the fan rotation and remove it. If those faults occurs continuously and frequently, please ask help for local distributors.
	I02	ExterFanWarning		
	I03	Fan3Warning		
	I04	EnvirTemp1AdChanWarning	Some temperature sensors abnormal	<ul style="list-style-type: none"> The warning does not affect the normal operation of the inverter. Power off, then restart. If fault still occurs continuously and frequently, please ask help for local distributors.
	I05	CoolingTemp2AdChanWarning		
	I06	Temp3AdChanWarning		
	I07	ExtFlashComWarning	Communication between the master CPU and the Flash is abnormal.	<ul style="list-style-type: none"> Power off, then restart. If fault still occurs continuously and frequently, please ask help for local distributors.
	I08	EepromComWarning	Communication between the master CPU and the Eeprom is abnormal.	
	I09	SlaveComWarning	Communication between slaver CPU and master CPU is abnormal	
	I10	HmiComWarning	Communication between master CPU and HMI is abnormal	
	I11	FreqCalcConflictWarning	Frequency value abnormal	
	I12	UnsetModel	Running model is not initial	<ul style="list-style-type: none"> Contact with local distributor.
Outside Warning	J01	MeterComWarning	Communication between inverter and meter is abnormal.	<ul style="list-style-type: none"> Check the meter model, and whether meter wiring and terminals are connected correctly, damaged or loose, if happens, make corrections. Power off, then restart. If fault still occurs continuously and frequently, please ask help for local distributors.
	J02	MeterConnectWarning	Meter/CT wiring fault, or installation position fault.	<ul style="list-style-type: none"> Check whether the meter or CT wiring, installation position, and installation direction are wrong, and make corrections. Power off, then restart. If fault still occurs continuously and frequently, please ask help for local distributors.

Type of Fault	Code	Name	Description	Recommend Solution
Outside Warming	J04	GndAbnormalWarning	Poor grounding or no grounding wire has been detected.	<ul style="list-style-type: none"> • Check whether the ground wire of the inverter is properly connected and whether the ground impedance is over, and make corrections. • Power off, then restart. • If fault still occurs continuously and frequently, please ask help for local distributors.
	J05	ParallelComWarning	Communication between master inverter and slaver ones abnormal in parallel mode.	<ul style="list-style-type: none"> • Check whether the parallel communication line is damaged, the terminal is loose, the wiring hole position is correct, and make corrections. • Power off, then restart. • If fault still occurs continuously and frequently, please ask help for local distributors.

9. Specifications

PV Input Data		BNT005KTL	BNT006KTL	BNT008KTL	BNT010KTL	BNT012KTL	BNT013KTL	BNT015KTL
Max. DC Power (W)	7500	9000	12000	15000	18000	20400	22500	
Max. DC Voltage (V)	650		750					
MPPT Voltage Range (V)	150 - 700							
MPPT Full Power Voltage Range (V)	220 - 600					330 - 600		
Rated Input Voltage (V)	380							
Start-up Voltage (V)	200							
Max. Input Current (A)	15 x 2		15 + 32	32 x 2				
Max. Short Current (A)	25 x 2		25 + 48	48 x 2				
No. of MPP Tracker / No. of PV String	2/2		2/3	2/4				
Input Connector Type	MC4							
AC Output Data	BNT005KTL	BNT006KTL	BNT008KTL	BNT010KTL	BNT012KTL	BNT013KTL	BNT015KTL	
Max. Output Power (W)	5500	6600	8800	11000	13200	14960	16500	
Nominal Output Power (W)	5000	6000	8000	10000	12000	13600	15000	
Max. Output Current (A)	14.4	17.3	23.1	28.9	34.6	36	40	
Nominal Output Voltage (V)	3P+N+PE /3P+PE 220/230							
Grid Voltage Range	180-270Vac (According to local standard)							
Nominal Output Frequency (Hz)	50/60							
Grid Frequency Range	45-55 / 55-65Hz (According to local standard)							
Output Power Factor	1 default (adjustable from 0.8 leading to 0.8 lagging)							
Output Current THD	<3%							
Efficiency	BNT005KTL	BNT006KTL	BNT008KTL	BNT010KTL	BNT012KTL	BNT013KTL	BNT015KTL	
Max. Efficiency	97.50%		98.00%					
Euro Efficiency	97.00%		97.40%			97.55%		
Protection	BNT005KTL	BNT006KTL	BNT008KTL	BNT010KTL	BNT012KTL	BNT013KTL	BNT015KTL	
PV Reverse Polarity Protection	YES							
PV Insulation Resistance Detection	YES							
AC Short Circuit Protection	YES							
AC Over Current Protection	YES							
AC Over Voltage Protection	YES							
Anti-Islanding Protection	YES							
Residual Current Detection	YES							
Over Temperature Protection	YES							
Integrated DC switch	YES							
Surge Protection	Integrated (Type II)							
Smart IV Curve Scanning	YES							
Quick Arc Fault Circuit Interruption	Optional							
General Data	BNT005KTL	BNT006KTL	BNT008KTL	BNT010KTL	BNT012KTL	BNT013KTL	BNT015KTL	
Dimensions (H x W x D, mm)	510 x 370 x 167							
Weight (kg)	17		19	21				
Protection Degree	IP65							
Enclosure Material	Aluminum							
Ambient Temperature Range (°C)	-25 - +60							
Humidity Range	0 -100%							
Topology	Transformerless							
Communication Interface	RS485 / WiFi / Wire Ethernet / GPRS (optional)							
Cooling Concept	Convection		Intelligent fan cooling					
Noise Emission (db)	<30		<40			<51		
Night Power Consumption (W)	<1							
Max. Operation Altitude (m)	≤4000							
Certifications and Standards	BNT005KTL	BNT006KTL	BNT008KTL	BNT010KTL	BNT012KTL	BNT013KTL	BNT015KTL	
EMC Standard	EN/IEC 61000-6-2, EN/IEC 61000-6-3, EN61000-3-2, EN61000-3-3, EN61000-3-11, EN61000-3-12							
Safety Standard	IEC 60068, UL1741, EN62109							
Grid-connection	IEEE1547, CSA C22, ENS0549, VDE4105, VDE0126, RD1699, ABNT NBR16149 & 16150, AS4777.2, NB/T32004, G98/G99, IEC61727							



Afore New Energy Technology (Shanghai) Co., LTD

ADD: Building 7, No.333 Wanfang Rd, Minhang District, Shanghai, China.

TEL: +86-21-5432 6236

FAX: +86-21-5432 6136

www.aforeenergy.com

RCD Selections for Afore inverters

Residual Current Monitoring Device (RCMD)

All Afore inverters integrated an all-current sensitive residual-current monitoring device (RCMD), the RCMD monitors AC and DC residual currents. The inverters integrated with RCMD are certificated by testing according to VDE 0126-1-1 and IEC/EN 62109-2, for all inverters, sudden changes in residual current $\geq 30\text{mA}$ will cause inverter disconnect from grid, for inverter $\leq 30\text{kVA}$ slow rising residual current $\geq 300\text{mA}$ will cause inverter disconnect from grid, and for inverters $> 30\text{kVA}$ the maximum 10mA per kVA of rated continuous output power is the limit value.

External RCD device

An external RCD is required in some countries, Afore suggest to use a Type A RCD and have an operating current of 300mA for inverter power rating up to 20kW . For inverter power rating above 20kW , suggest to use RCD above 300mA , must bigger than 10mA/kVA of continuous output power.

Note:

For Multiple inverters, one RCD for each inverter is required. An RCD of 30mA may easy trip due to capacitive leakage currents occurring during operation

